

6/3/2020

TOOLS NEEDED: 2MM ALLEN WRENCH

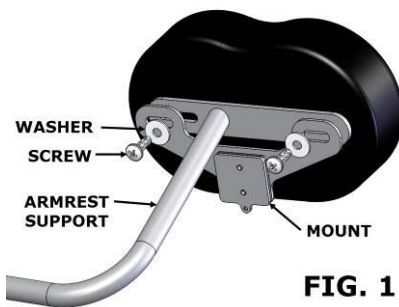
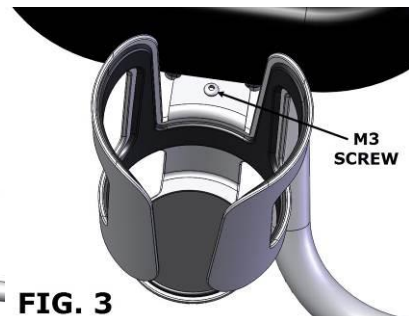
PHILLIPS SCREWDRIVER

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

NOTE: THE ARMREST MOUNT CAN MOUNT ON THE OUTSIDE OR THE INSIDE OF THE ARMREST AND ON THE RIGHT OR THE LEFT SIDE.

INSTALLATION:

1. USING A PHILLIPS SCREWDRIVER REMOVE THE TWO SCREWS HOLDING THE ARMREST PAD TO THE ARMREST SUPPORT.
2. TAKE THE NEW MOUNT AND PLACE IT ON THE BOTTOM OF THE ARMREST SUPPORT.
3. REINSTALL THE WASHERS AND SCREW THROUGH ALL OF THE ITEMS AS SHOWN IN FIG. 1.
4. ALIGN ALL OF THE ITEMS AS YOU WANT THEM AND TIGHTEN BOTH SCREWS.
5. SLIDE BEVERAGE HOLDER INTO MOUNT AS SHOWN IN FIG. 2.
6. USING A 2MM ALLEN WRENCH INSTALL THE M3-0.5 X 6MM LONG SCREW THAT CAME WITH THE MOUNT. SEE FIG. 3.

Scan code
with your
smartphone
to view video**FIG. 1****FIG. 2****FIG. 3**

6/3/2020

TOOLS NEEDED: 2MM ALLEN WRENCH

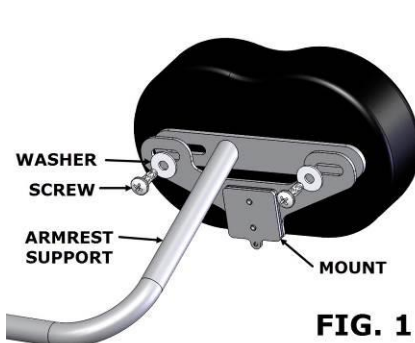
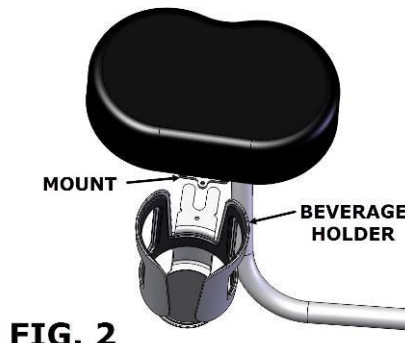
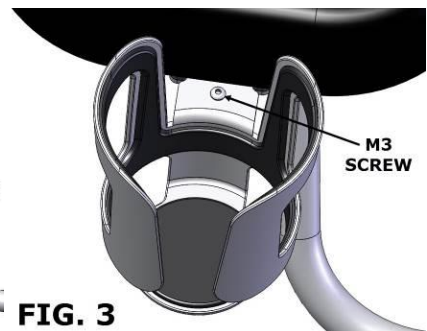
PHILLIPS SCREWDRIVER

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.

NOTE: THE ARMREST MOUNT CAN MOUNT ON THE OUTSIDE OR THE INSIDE OF THE ARMREST AND ON THE RIGHT OR THE LEFT SIDE.

INSTALLATION:

1. USING A PHILLIPS SCREWDRIVER REMOVE THE TWO SCREWS HOLDING THE ARMREST PAD TO THE ARMREST SUPPORT.
2. TAKE THE NEW MOUNT AND PLACE IT ON THE BOTTOM OF THE ARMREST SUPPORT.
3. REINSTALL THE WASHERS AND SCREW THROUGH ALL OF THE ITEMS AS SHOWN IN FIG. 1.
4. ALIGN ALL OF THE ITEMS AS YOU WANT THEM AND TIGHTEN BOTH SCREWS.
5. SLIDE BEVERAGE HOLDER INTO MOUNT AS SHOWN IN FIG. 2.
6. USING A 2MM ALLEN WRENCH INSTALL THE M3-0.5 X 6MM LONG SCREW THAT CAME WITH THE MOUNT. SEE FIG. 3.

Scan code
with your
smartphone
to view video**FIG. 1****FIG. 2****FIG. 3**